

Linear Monitor Kiosk

Linear Monitor Kiosk is the perfect compliment to your linear back wall display system or any display or P.O.P. unit. From literature holders to simple monitor displays incorporating table tops and PC storage the Linear Kiosk is a versatile addition to any booth space.



LN-MK-3

Features & Benefits

- Versatile Compatibility: PC/Mac, Blu-ray, HD-DVD, DVD, LaserDisc, VHS and more†.
- Monitor mount conforms to the VESA standard, which fits most monitors*.
- Monitor & Literature Holder height/angel are adjustable for added versatility.
- Lower counter height is also adjustable (except LN-MK-1).
- Your choice of standard sizes, configurations, and tabletop colors compliment your booth decor.
- Modular portability makes the unit great on-the-go.
- Sturdy aluminum frame construction and die formed base provide stability.
- Standardized kits allow for quick shipping.
- Installation tool included.



LN-MK-1



LN-MK-4



LN-MK-2



LN-MK-5

Hardware Specifications

LN-MK-1:
86.5"(t) x 29.25"(d) x 18.5"(w)
2197mm(t) x 743mm(l) x 470mm(w)

LN-MK-2 & LN-MK-4:
86.5"(t) x 30.75"(d) x 23.25"(w)
2197mm(t) x 781mm(l) x 591mm(w)

LN-MK-3 & LN-MK-5:
86.5"(t) x 47.5"(d) x 23.25"(w)
2197mm(t) x 1207mm(l) x 591mm(w)

Graphic Dimensions

Please use available templates when setting up artwork.

Left & Right Top Wings:
Total Size: 11"(w) x 42.5"(h)
279mm(w) x 1080mm(h)
Trim Size: 10"(w) x 41.5"(h)
254mm(w) x 1054mm(h)

Left & Right Bottom Wings:
Total Size: 11"(w) x 42.5"(h)
279mm(w) x 1080mm(h)
Trim Size: 10"(w) x 41.5"(h)
254mm(w) x 1054mm(h)

Additional Info

Total Shipping Weight:
LN-MK-1: 62.00lbs /29kg
LN-MK-2: 78.00lbs /35.5kg
LN-MK-3: 98.00lbs /45.5kg
LN-MK-4: 70.00lbs /32kg
LN-MK-5: 90.00lbs /41kg

Shipping Case Dimensions:
50"(l) x 28"(w) x 12"(d)
1270mm(l) x 712mm(w) x 305mm(d)

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.



19" x 15" Counter Unit



22" x 24" Counter Unit



Monitor Mounting Kit

CHOICE OF COUNTER COLORS:

- BRUSHED SILVER (SILVER TEXTURED)
- BLACK (TEXTURED)
- AMERICAN NATURAL (LIGHT WOOD)
- CLOVE (DARK WOOD)



6" Leg



Base Screw



Base Washer



- Corner Mount
1. Mount Bracket
 2. Mount Covering
 3. Mount Screw



Joining Bar




- Literature Holder Kit
1. Literature Holder
 2. Joining Bar
 3. Thumbscrew
 4. Washer



42" Main Pole Section



36" Leg

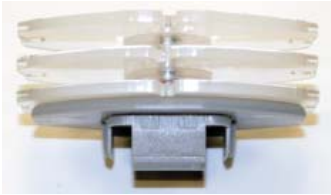

Main Post Cap



10.5" Support Bar



Base



Top Wing (Left)



Top Wing (Right)



Bottom Wing (Left)



Bottom Wing (Right)



Installation Tool



42" Cable Management Conduit

The pictures on this page are not to scale.



LN-MK-1

19" x 15" Counter Unit
42" Main Pole Section [x2]
6" Legs [x2]
Base Screw
Base Washer
Base
Corner Mount
Joining Bar [x4]
Post Cap
Monitor Mounting Kit

Literature Holder Kit [x2]
Per kit:
1 Joining Bar
2 Thumb Screws
2 Washers
42" Cable Management Conduit [x2]

**For installation please see steps:
1 - 4, 6, 8, 10, 12, 13, 15 & 16**



LN-MK-4

19" x 15" Counter Unit
22" x 24" Counter Unit
42" Main Pole Section [x2]
36" Legs [x2]
10.5" Support Bar
Base Screw
Base Washer
Base
Corner Mount [x2]
Joining Bar [x6]
Post Cap
Monitor Mounting Kit

Top Wing [Right]
Bottom Wing [Right]
42" Cable Management Conduit [x2]

**For installation please see steps:
1 - 4, 6 - 9, 10, 12, 13, 15 & 16**



LN-MK-2

19" x 15" Counter Unit
22" x 24" Counter Unit
42" Main Pole Section [x2]
36" Legs [x2]
10.5" Support Bar
Base Screw
Base Washer
Base
Corner Mount [x2]
Joining Bar [x4]
Post Cap
Monitor Mounting Kit

Literature Holder Kit [x2]
Per kit:
1 Joining Bar
2 Thumb Screws
2 Washers
42" Cable Management Conduit [x2]

**For installation please see steps:
1 - 5 (B - D), 6 - 11 (B - D), 12, 13, 15 & 16**



LN-MK-5

19" x 15" Counter Unit [x2]
22" x 24" Counter Unit [x2]
42" Main Pole Section [x2]
36" Legs [x4]
10.5" Support Bar [x2]
Base Screw
Base Washer
Base
Corner Mount [x4]
Joining Bar [x6]
Post Cap
Monitor Mounting Kit

Top Wing [Left & Right, 1 each]
Bottom Wing [Left & Right, 1 each]
42" Cable Management Conduit [x2]

**For installation please see steps:
1 - 4, 6 - 10, 12 - 16**



LN-MK-3

19" x 15" Counter Unit [x2]
22" x 24" Counter Unit [x2]
42" Main Pole Section [x2]
36" Legs [x4]
10.5" Support Bar [x2]
Base Screw
Base Washer
Base
Corner Mount [x4]
Joining Bar [x4]
Post Cap
Monitor Mounting Kit [x2]

Literature Holder Kit [x2]
Per kit:
1 Joining Bar
2 Thumb Screws
2 Washers
Top Wing [Right]
Bottom Wing [Right]
42" Cable Management Conduit [x2]

**For installation please see steps:
1 - 16**



1



Place the washer on the base and align the holes for the screw. Screw the base to the bottom section of the main pole turning clockwise until secure.



2

Stand the base upright and insert the *corner mount brackets* into the channels of the sides you wish the counters to be mounted. You will install two brackets per channel. Slide the mounts to the bottom of the channels until the lower one sits against the base. The mounts should be installed on opposite sides.



3

Slide the *joining bar* into the channel and align the bar so that the top of the pole is equidistant between the middle two screws. Screw the bar into place, turning clockwise until it is secure.



4

Align the bottom of the channels on the upper pole section with the *joining bars*. Slide the pole in place and screw the remaining screws, of the *joining bars*, clockwise until they are secure.



5

A) Slide the *joining bar* for the *literature holder* into the channels, of the upper pole section, on the same sides as the *corner mounts* installed in step 2. B) Slide the *joining bar* for the monitor mount into a channel adjacent to the *joining bars* for the literature holder.



6

Install the *post cap* into the top of the upper main pole section. The cap will slide into place and fit firmly into the post.



7



Place the support bar between the 36" legs at the appropriate height for the lower counter unit and turn the screw clockwise to lock the bar in place.



8


Screw the 36" legs into the bottom of the 22" x 24" counter unit turning clockwise until secure. The 6" legs for the 19" x 15" counter unit (LN-MK-1 only) are installed in the same manner.



9



A) Position the *corner mount*, installed in step 5, to the same height as the 22" x 24" counter when both feet are firmly on the ground. B) Put the *mount covering* onto the *corner mount* and using your fingers twist the appropriate screw half way in. C) Once the counter unit is in place use the installation tool to turn the *mount screw* clockwise until secure. D) Repeat for the second unit.

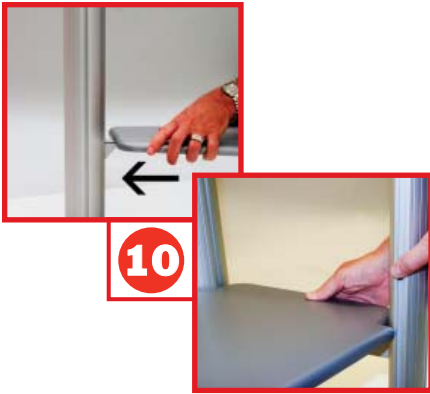

A) Position the *corner mount*, installed in step 2, so that the 19"x15" counter unit will rest level on the *support bar*. B) Put the mount covering onto the *corner mount* and using your fingers twist the appropriate screw half way in. C) Once the counter unit is in place use the provided tool to turn the *mount screw* clockwise until secure. The support bar will fit into a groove on the bottom of the counter. D) Repeat for the second unit.



A) Position the *joining bar* for the *literature holder* (installed in step 5) to the appropriate height. Leave enough room underneath for the second holder. Secure the *Joining bar* by turning the middle two screws clockwise. Remove the top and bottom screws. B) Place a washer on the thumbscrew, put it through the top hole in the *literature holder*, and screw it into the top hole of the *joining bar*. Repeat for the bottom screw. C) Install the second literature holder as you did the first. You will install it, on the same side of the pole, into the *joining bar* that connects the upper and lower pole sections.



A) Position the *joining bar* for the monitor mount (installed in step 5) to the appropriate height. Secure the *Joining bar* by turning the middle two screws clockwise. Remove the top and bottom screws. B) From the monitor mounting kit take out the thumbscrews, washers, and mounting plate. Put one of the washers onto one of the thumbscrews. Put the thumbscrew through the upper most opening of the mounting plate, into the top screw hole of the *joining bar*, and turn clockwise until secure. C) Repeat for the second thumbscrew installing it as shown.



Please refer to manufacturer's instructions for installing the monitor mount and LCD TV. **The kiosks have been designed to accommodate monitors NO larger than 32" (40lbs). LCD TVs (and/or computers) are not provided.*



Install the headers by snapping the bracket into the channel on the pole opposite the literature rack.



A) Take the power cord for your monitor and insert it into the opening on the back side of the *Cable management conduit*. B) Snap the conduit into the channel on the back side of the upper main pole section, directly above the *joining bar*. C) Repeat for the second conduit, snapping it into the channel on the back side of the lower main pole section, directly below the same *joining bar*. D) You may cut your Cable Management Conduit to the appropriate length as your needs dictate.



†Device compatibility depends on your monitor. PC and Mac require a DVI connection or DVI Cable and DVI to HDMI adapter. No video hardware is supplied. The Seller, along with any and all third parties, whether associated or non associated, shall be free from liability if damage should occur to your video/audio and/or other hardware not expressly named here within, as well as you and/or anyone else's person due to improper use of this product.